


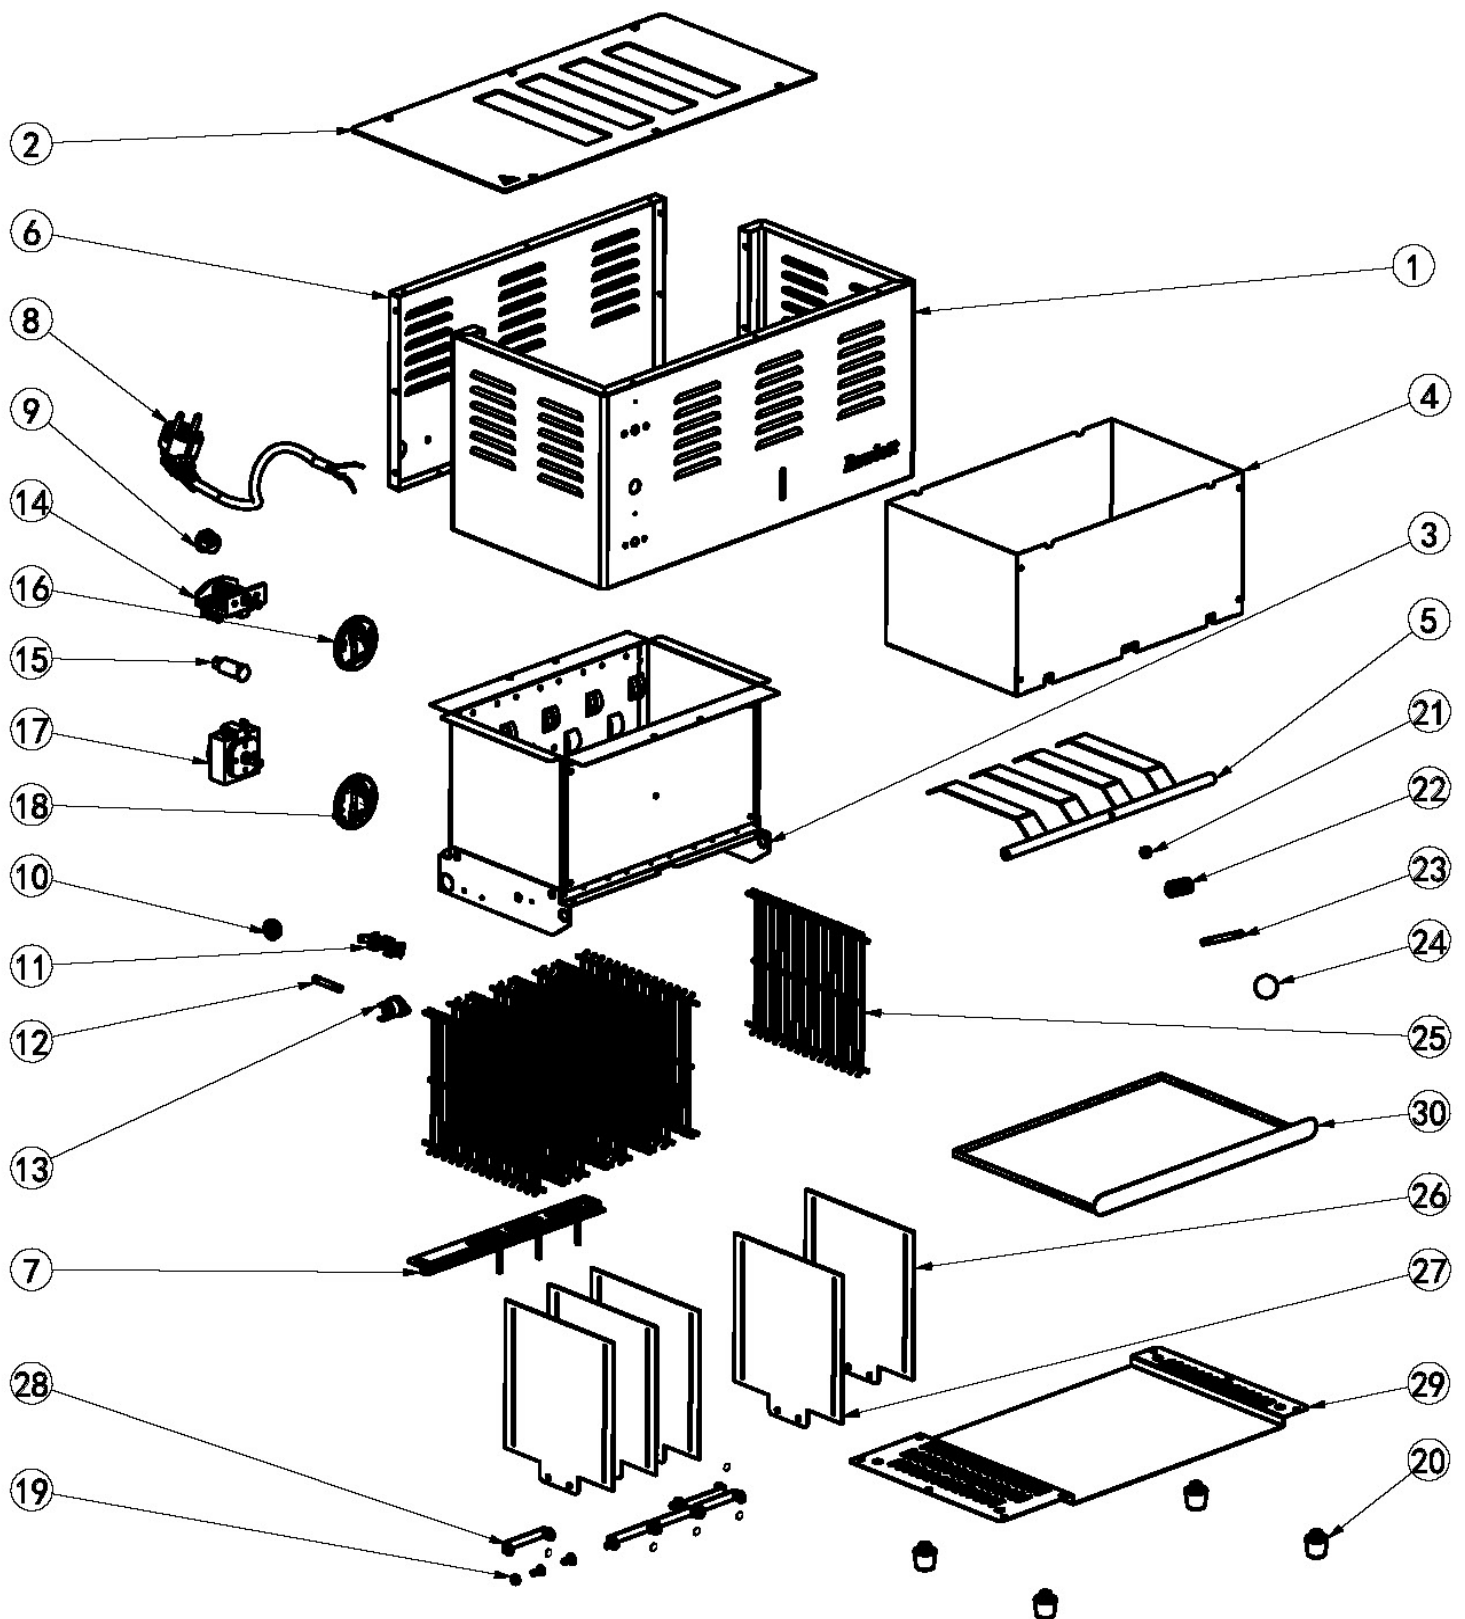

Machine	Explode	Code	Description
Rowlett Regent 4 Slot Toaster	1		Reg-4 Body (Black)
Rowlett Regent 4 Slot Toaster	1		Reg-4 Body (Quartz Grey)
Rowlett Regent 4 Slot Toaster	1		Reg-4 Body (Traffic Red)
Rowlett Regent 4 Slot Toaster	1		Reg-4 Body (White)
Rowlett Regent 4 Slot Toaster	2		Reg-4 Top Plate
Rowlett Regent 4 Slot Toaster	3		Inner Assy-4
Rowlett Regent 4 Slot Toaster	4		Heat Shield Assy-6
Rowlett Regent 4 Slot Toaster	5		Finger Bar-4
Rowlett Regent 4 Slot Toaster	6		Back of Body-4
Rowlett Regent 4 Slot Toaster	7		Fixed Plate-4
Rowlett Regent 4 Slot Toaster	8	AK221	Power Cord
Rowlett Regent 4 Slot Toaster	9		Power Cord Buckle
Rowlett Regent 4 Slot Toaster	10		Wire Bushing
Rowlett Regent 4 Slot Toaster	11	AK222	Fuse Holder
Rowlett Regent 4 Slot Toaster	12		Fuse
Rowlett Regent 4 Slot Toaster	13	AK223	Thermostat Cut Out
Rowlett Regent 4 Slot Toaster	14	AK224	Position Selector
Rowlett Regent 4 Slot Toaster	15	AK225	Indicator
Rowlett Regent 4 Slot Toaster	16	AK587	Selector Knob
Rowlett Regent 4 Slot Toaster	17	AK239	Timer
Rowlett Regent 4 Slot Toaster	18	AK240	Timer Knob
Rowlett Regent 4 Slot Toaster	19		Screw/Nut
Rowlett Regent 4 Slot Toaster	20	AK229	Feet (set 4)
Rowlett Regent 4 Slot Toaster	21	AK230	Nut
Rowlett Regent 4 Slot Toaster	22		Spring
Rowlett Regent 4 Slot Toaster	23		Ejectorbar
Rowlett Regent 4 Slot Toaster	24		Sphere Knob
Rowlett Regent 4 Slot Toaster	25		Guard Wire
Rowlett Regent 4 Slot Toaster	26	AK231	End Element 310W
Rowlett Regent 4 Slot Toaster	27	AK232	Middle Element 400W
Rowlett Regent 4 Slot Toaster	28	AK233	Element Link
Rowlett Regent 4 Slot Toaster	29		Base Plate-4
Rowlett Regent 4 Slot Toaster	30	AK237	Crumb Tray-4
Rowlett Regent 4 Slot Toaster	N/A	AL994	Side & Middle Elements