


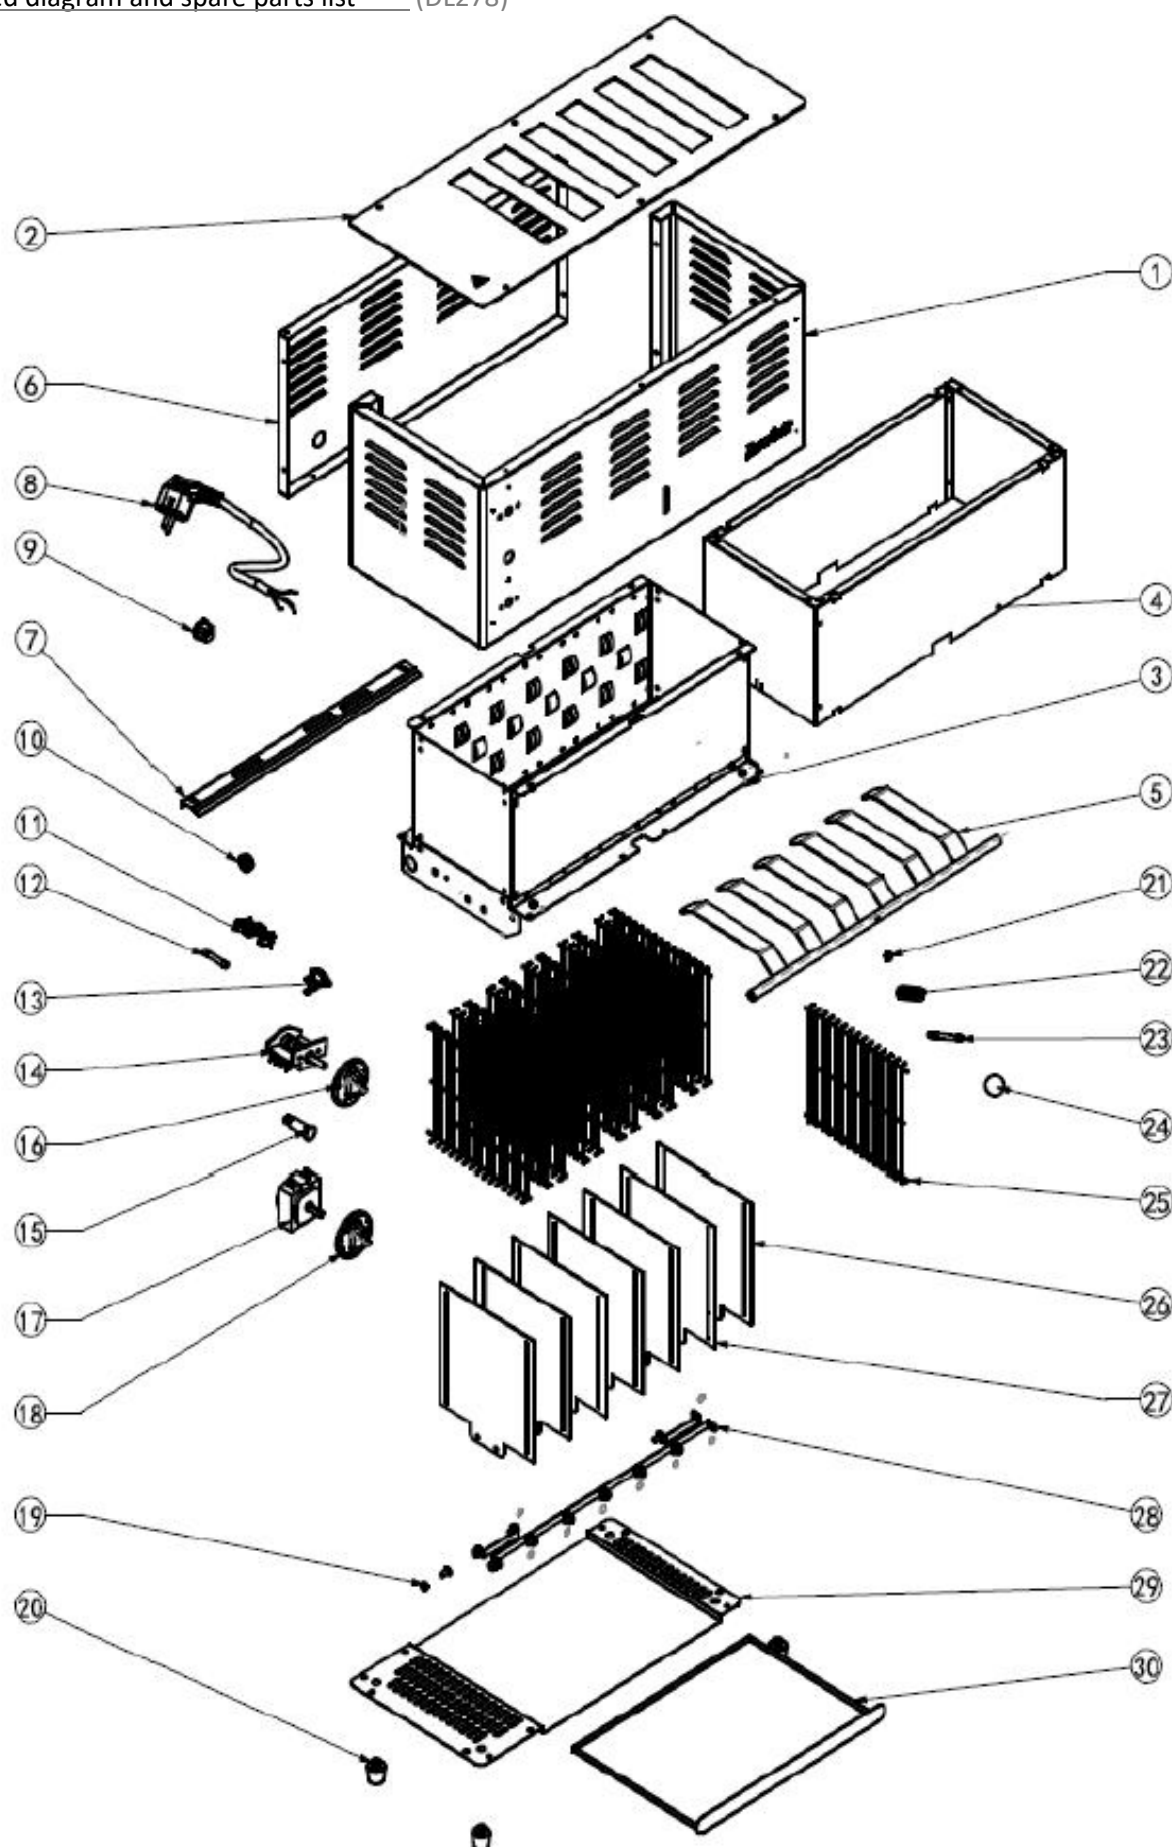

Machine	Explode	Code	Description
DL278 - Rowlett Regent 6 Slot Toaster White	1		Reg-6 Body
DL278 - Rowlett Regent 6 Slot Toaster White	2		Reg-6 Top Plate
DL278 - Rowlett Regent 6 Slot Toaster White	3		Inner Assy/R6
DL278 - Rowlett Regent 6 Slot Toaster White	4		Heat Shield Assy/R6
DL278 - Rowlett Regent 6 Slot Toaster White	5		Finger Bar/6P
DL278 - Rowlett Regent 6 Slot Toaster White	6		Back of Body/6P
DL278 - Rowlett Regent 6 Slot Toaster White	7		Fixed Plate/6P
DL278 - Rowlett Regent 6 Slot Toaster White	8	AK221	Power Cord
DL278 - Rowlett Regent 6 Slot Toaster White	9		Power Cord Buckle
DL278 - Rowlett Regent 6 Slot Toaster White	10		Wire Bushing
DL278 - Rowlett Regent 6 Slot Toaster White	11	AK222	Fuse Holder
DL278 - Rowlett Regent 6 Slot Toaster White	12		Fuse
DL278 - Rowlett Regent 6 Slot Toaster White	13	AK223	Thermostat
DL278 - Rowlett Regent 6 Slot Toaster White	14	AK224	Position Selector
DL278 - Rowlett Regent 6 Slot Toaster White	15	AK225	Indicator
DL278 - Rowlett Regent 6 Slot Toaster White	16	AK226	Selector Knob
DL278 - Rowlett Regent 6 Slot Toaster White	17	AK239	Timer
DL278 - Rowlett Regent 6 Slot Toaster White	18	AK240	Timer Knob
DL278 - Rowlett Regent 6 Slot Toaster White	19		Screw/Nut
DL278 - Rowlett Regent 6 Slot Toaster White	20	AK229	Feet (set 4)
DL278 - Rowlett Regent 6 Slot Toaster White	21	AK230	Nut
DL278 - Rowlett Regent 6 Slot Toaster White	22		Spring
DL278 - Rowlett Regent 6 Slot Toaster White	23		Ejectorbar
DL278 - Rowlett Regent 6 Slot Toaster White	24		Sphere Knob
DL278 - Rowlett Regent 6 Slot Toaster White	25		Guard Wire
DL278 - Rowlett Regent 6 Slot Toaster White	26	AK231	End Element 310W
DL278 - Rowlett Regent 6 Slot Toaster White	27	AK232	Middle Element 400W
DL278 - Rowlett Regent 6 Slot Toaster White	28	AK233	Element Link
DL278 - Rowlett Regent 6 Slot Toaster White	29		Base Plate/P6
DL278 - Rowlett Regent 6 Slot Toaster White	30	AK238	Crumb Tray/P6