


Machine	Explode	Code	Description
DR061 - Rowlett Esprit 2 Slot Toaster White	1		Espr-2 Body
DR061 - Rowlett Esprit 2 Slot Toaster White	2		Front Panel-2
DR061 - Rowlett Esprit 2 Slot Toaster White	3		Inner Assy-2
DR061 - Rowlett Esprit 2 Slot Toaster White	4		Heat Shield Assy-2
DR061 - Rowlett Esprit 2 Slot Toaster White	5		Finger Bar-2
DR061 - Rowlett Esprit 2 Slot Toaster White	6		Back Panel-2
DR061 - Rowlett Esprit 2 Slot Toaster White	7		Fixed Plate-2
DR061 - Rowlett Esprit 2 Slot Toaster White	8	AK221	Power Cord
DR061 - Rowlett Esprit 2 Slot Toaster White	9		Power Cord Buckle
DR061 - Rowlett Esprit 2 Slot Toaster White	10		Wire Bushing
DR061 - Rowlett Esprit 2 Slot Toaster White	11	AK222	Fuse Holder
DR061 - Rowlett Esprit 2 Slot Toaster White	12		Fuse
DR061 - Rowlett Esprit 2 Slot Toaster White	13	AK223	Thermostat Cut Out
DR061 - Rowlett Esprit 2 Slot Toaster White	14	AK225	Indicator
DR061 - Rowlett Esprit 2 Slot Toaster White	15	AK227	Timer-old version
DR061 - Rowlett Esprit 2 Slot Toaster White	16	AK228	Timer Knob-old version
DR061 - Rowlett Esprit 2 Slot Toaster White	15	AK239	Timer-From DR061-03
DR061 - Rowlett Esprit 2 Slot Toaster White	16	AK240	Timer Knob-From DR061-03
DR061 - Rowlett Esprit 2 Slot Toaster White	17		Base Plate
DR061 - Rowlett Esprit 2 Slot Toaster White	18	AK235	Crumb Tray
DR061 - Rowlett Esprit 2 Slot Toaster White	19		Screw/Nut
DR061 - Rowlett Esprit 2 Slot Toaster White	20	AK241	Rubber Feet (set 4)
DR061 - Rowlett Esprit 2 Slot Toaster White	21	AK230	Nut
DR061 - Rowlett Esprit 2 Slot Toaster White	22		Spring
DR061 - Rowlett Esprit 2 Slot Toaster White	23		Ejectorbar
DR061 - Rowlett Esprit 2 Slot Toaster White	24		Sphere Knob
DR061 - Rowlett Esprit 2 Slot Toaster White	25		Guard Wire
DR061 - Rowlett Esprit 2 Slot Toaster White	26	AK231	End Element 310W
DR061 - Rowlett Esprit 2 Slot Toaster White	27	AK232	Middle Element 400W
DR061 - Rowlett Esprit 2 Slot Toaster White	28	AK233	Element Link
DR061 - Rowlett Esprit 2 Slot Toaster White	29		Casting White for DR061
DR061 - Rowlett Esprit 2 Slot Toaster White	30		Casting White for DR061
DR061 - Rowlett Esprit 2 Slot Toaster White	32	AL132	3 Position Selector-From DR061-03
DR061 - Rowlett Esprit 2 Slot Toaster White	33	AL133	Selector Knob-From DR061-03